



## Premium Maintenance Plan

## Diesel EngineCARE

Covers 13 Critical Powertrain Components

# 13

## PowertrainCARE

Covers 29 Critical Powertrain Components

# 29

## BaseCARE

Covers 84 Major Components

# 84

## ExtraCARE

Covers 113 Components

# 113

## PremiumCARE

Covers more than 1,000 Components (Partial List)

# 1000+

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorbers/Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Cylinder Head Gasket
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- All Internally Lubricated Parts (Engine)
- Automatic Front Locking Hubs (Four-Wheel Drive)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Linkage and Bushings
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- MacPherson Struts (Front)
- Driveshaft
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Fluid Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transfer Case & Transmission)
- Alternator
- Automatic Front Locking Hubs (Four-Wheel Drive)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Back Glass, Heated (Electrical Only - Not Glass Damage or Breakage)
- Backing Plates (Brakes)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt
- Idler Arm
- Ignition Switch

- Kingpins and Bushings (Front Suspension)
- Lines and Fittings (Metal - Brakes)
- Linkage and Bushings (Front & Rear Suspension)
- Linkages (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Master Cylinder
- Metal Fuel Lines
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Steering Pump
- Pulley Assy (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine, Front and Rear-Drive Axles, Steering & Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front)
- Springs (Brakes)
- Stabilizer Bar (Front)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Tie Rods (Front Suspension)
- Timing Chain (Gears or Belt)
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- Water Pump
- Wheel Cylinders
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- Starter Motor
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- Adaptive Cruise Control
- Air Suspension, Electronic (Selected Components)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing & Gasket (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas & Diesel Fuel Injectors and Metal Fuel Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Core Assy
- Idler Arm (Steering)
- Ignition Module
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Keyless Entry System (Excluding Door Handles)
- Kingpins & Bushings (Front Suspension)
- Lines & Fittings (Brakes)
- Linkage & Bushings (Front Suspension)
- Linkages & Couplings (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Master Cylinder
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Metal Links & Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Antenna
- Power Door Locks & Retainer Clips (Excluding Door Handles)
- Power Seat Motors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Actuator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Adjuster - Torsion Bar
- Adjuster Assembly - Front/Rear Seat
- Adjuster Assembly - Steering Worm
- Air Bag Smart Sensor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve

- Speedometer/Odometer (Electrical and Mechanical)
- Spindle & Spindle Supports
- Springs (Brakes)
- Stabilizer Bar
- Starter Motor
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- Adaptive Cruise Control
- Air Suspension, Electronic (Selected Components)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing & Gasket (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Actuator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Adjuster - Torsion Bar
- Adjuster Assembly - Front/Rear Seat
- Adjuster Assembly - Steering Worm
- Air Bag Smart Sensor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve

- Air Idle Vacuum Valve
- Air Intake Ducting
- Air Pump Muffler
- Air Reservoir Tank Assembly
- Air Spring Solenoid
- Air Suspension Solenoid
- Air Suspension Compressor Assembly
- Air Suspension Dryer Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly A/C Valve
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Antenna Remote Control
- Anti-Lock Brake Sensor
- Anti-Slosh Module
- Anti-Skid Brake Relay
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly
- Front Suspension Compressor
- Bearing Assembly - Air Suspension
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector Plate
- Arm Assembly - Windshield Wiper Motor
- Armature Sensor Motor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve

- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly
- Ball Joint Assembly - Upper/Lower
- Ballast - Hi Mount Stop Lamp
- Band - Front
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Suspension
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control Seal
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator

- Bolt Differential Gear Case
- Boost Pressure Switch
- Booster Assembly - Power Brake
- Boot - Brake Cylinder Front/Rear
- Boot - Driveshaft Joint
- Boot - Gearshift Control
- Boot - Rear Axle CV Joint
- Boot - Steering Column
- Boot Courtesy Lamp Switch
- Brace - Engine to Transmission
- Bracket A/C Comp Mounting
- Bracket A/C Condenser Mt
- Bracket A/C Hose
- Bracket Assembly - Front Shock
- Bracket Assembly - Front/ Rear Seat Side Armrest Mounting
- Bracket Assembly - Rear Shock
- Bracket for Radius Arm
- Bracket Rear Door Glass
- Bracket Stabilizer Bar Link
- Brake Adjuster Screw
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control Seal
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator

- Cap Assembly - Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/ Handsset/ Speaker Assembly
- Chain Timing
- Chassis Radio
- Child Safety Belt
- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever
- Clip - Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Assembly - Planetary
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Compressor - Air Conditioner
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Cone Roller Front Wheel Outer
- Connection - Water Outlet
- Control Arm Assembly - Front Suspension
- Upper/Lower
- Control Arm Assembly - Rear Suspension
- Upper/Lower
- Control Assembly - Brake Seat Lock
- Control Assembly - Light Dimmer
- Control Assembly - Parking Brake
- Control Assembly - Relay Module
- Control Assembly - Transmission Gear
- Control Assembly - Valve Body
- Control Head - Rear
- Control Module - Air Suspension
- Control Module - Heated Windshield
- Control Unit - Anti-Lock
- Control Valve Seals
- Controls - Rear Seat
- Coolant Pump
- Coolant Temp Switch
- Coolant Tube
- Clutch Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil
- Cooler - EGR Oil
- Cooler - Transmission Oil
- Cooler Assembly - Power Steering Oil
- Cooler Assembly EGR
- Cooler Assembly EGR Recirculation
- Core - Air Conditioner Evaporator
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting
- Crankcase Vent Tube
- Crankshaft Bearings
- Cup Wheel Bearing
- CV Joint Assembly - Inboard
- CV Joint Assembly - Outboard
- Disc and Hub Assembly A/C
- Disc Spring - Front Clutch Pressure Plate
- Differential Navigation System
- Display Module
- Door Assembly Heater Air Seat Back
- Door Assembly Heater and A/C
- Door Latch Control
- Door Latch Control Front/Rear
- Door Lock Actuator Front/Rear
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Dampener - Front Axle Kingpin
- Damper - Crankshaft
- Damper - Rear Axle
- Damper - Steering Wheel
- Damper Assembly - Timing Chain
- Damper Drive Line Vibration

- Damper Front Spring
- Damper Rear Spring
- Detent - Transmission Control
- Diaphragm Assembly - TV Connector
- Drive Axle - Right
- Diesel Fuel Injector
- Diesel Fuel Injector Pump
- Diesel Lift Pump
- Differential Assembly - Rear
- Differential Case Gear Support
- Differential Locking Mechanism
- Differential Side Gears
- Disc Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub Assembly A/C
- Disc Spring - Front Clutch Pressure Plate
- Differential Navigation System
- Display Module
- Door Assembly Heater Air Seat Back
- Door Assembly Heater and A/C
- Door Latch Control
- Door Latch Control Front/Rear
- Door Lock Actuator Front/Rear
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Dampener - Front Axle Kingpin
- Damper - Crankshaft
- Damper - Rear Axle
- Damper - Steering Wheel
- Damper Assembly - Timing Chain
- Damper Drive Line Vibration

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Seal
- Diesel Fuel Injector
- Diesel Fuel Injector Pump
- Diesel Lift Pump
- Differential Assembly - Rear
- Differential Case Gear Support
- Differential Locking Mechanism
- Differential Side Gears
- Disc Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub Assembly A/C
- Disc Spring - Front Clutch Pressure Plate
- Differential Navigation System
- Display Module
- Door Assembly Heater Air Seat Back
- Door Assembly Heater and A/C
- Door Latch Control
- Door Latch Control Front/Rear
- Door Lock Actuator Front/Rear
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Dampener - Front Axle Kingpin
- Damper - Crankshaft
- Damper - Rear Axle
- Damper - Steering Wheel
- Damper Assembly - Timing Chain
- Damper Drive Line Vibration

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blower
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint
- Flange Universal Joint Spine
- Flapper Valve - Fuel Filler Pipe
- Fork - Gear Shifter
- Fork and Roller Assembly - Differential
- Frame Front/Rear Seat Back
- Freeze Plug - Cylinder Block
- Front Axle Assembly - Drive
- Front Axle Bump Bracket
- Front Axle Hose Clip
- Front Differential Gears
- Front Differential Internal Bearings
- Front Driveshaft
- Front Hub Assembly
- Front Pump Assembly - Transmission
- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Front Switch Assembly
- Front Twin I Beam Axle Bearing Rotor

- Gasket - Reverse Servo Plate
- Gasket - Trans Assembly
- Gasket - Trans Gear Shift
- Gasket - Transmission Intermediate Band
- Gasket - Turbo Oil Tub
- Gasket - Turbocharger
- Gasket - Water Pump
- Gasket - Wiring Connector
- Gasket and Shaft Seal
- Gauge Assembly Vacuum
- Gear - Camshaft Drive
- Gear - Center Shaft Reverse
- Gear - Countershaft Clutch
- Gear - Differential Shift
- Gear - Engine Balance Shaft
- Gear - Low and Reverse
- Gear - Oil Pump Drive
- Gear - Output Shaft
- Gear - Reverse
- Gear - Reverse Idler
- Gear - Transmission Head Cover
- Gear - Transmission Countershaft
- Gear - Transmission Reverse Idler
- Gear and Pinion
- Gear Assembly - Final Drive
- Gear Assembly - Intermediate
- Gear Assembly - Power Steering Short
- Gear Assembly Spare Wheel
- Gear Bushing Assembly - Reverse Idle
- Gear Differential Planetary
- Gear Front Axle Shift
- Gear Ring Gear
- Gear Steering Column Lock
- Gear/Hub - Auxiliary Trans
- General Electronic Module

- GPS System and Module - Factory-Installed
- Guide - Sun Roof Cable
- Guide - Timing Chain
- Guide Shoulder Strap
- Handle Assembly - Rear Seat
- Head - A/C Compressor Cylinder
- Headlamp Ballast
- Headlamp/Taillamp Bulbs\*
- Heads-Up Display
- Heat Element - Front Seat
- Heat Shield
- Heater and A/C Control Regulator
- HID (High-Intensity Discharge) Headlights - Factory-Installed\*
- High Voltage Charger
- Hinge and Check - Front/Rear Door Lower
- Hinge - Front/Rear Door Upper
- Horn Assembly - High Pitch
- Horn Assembly - Low Pitch
- Horn Switch
- Hose - Power Steering Pressure
- Hose - Power Steering Reservoir Top
- Hose and Filter - Power Steering Line
- Hose Assembly - A/C Vacuum
- Hose Assembly - Power Steering Pressure
- Hose Assembly - Power Steering Return
- Hose Exhaust Air Pump
- Hose Front/Rear Seat B/ Pad
- Housing - Steering Gear
- Housing and Bearing Assembly Clutch

## Essential Maintenance Plans

## Diesel EngineCARE Plus

Covers 21 Critical Powertrain Components

# 21

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection
- Engine Maintenance covers lube/oil/filter only

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Oil Pan
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Thermostat
- Thermostat Housing
- Water Pump
- Flywheel
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Seals and Gaskets (Includes Cylinder Head Gasket)
- Valve Covers
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Water Pump

- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Thermostat
- Thermostat Housing
- Water Pump
- Flywheel
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Seals and Gaskets (Includes Cylinder Head Gasket)
- Valve Covers
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- All Internally Lubricated Parts (Engine)
- Automatic Front Locking Hubs (Four-Wheel Drive)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Linkage and Bushings
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- MacPherson Struts (Front)
- Driveshaft
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Fluid Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transfer Case & Transmission)
- Alternator
- Automatic Front Locking Hubs (Four-Wheel Drive)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Back Glass, Heated (Electrical Only - Not Glass Damage or Breakage)
- Backing Plates (Brakes)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt
- Idler Arm
- Ignition Switch

- Kingpins and Bushings (Front Suspension)
- Lines and Fittings (Metal - Brakes)
- Linkage and Bushings (Front & Rear Suspension)
- Linkages (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Master Cylinder
- Metal Fuel Lines
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Steering Pump
- Pulley Assy (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine, Front and Rear-Drive Axles, Steering & Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front)
- Springs (Brakes)
- Stabilizer Bar (Front)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Timing Chain (Gears or Belt)
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- Water Pump
- Wheel Cylinders
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- Starter Motor
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- Adaptive Cruise Control
- Air Suspension, Electronic (Selected Components)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing & Gasket (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas & Diesel Fuel Injectors and Metal Fuel Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Core Assy
- Idler Arm (Steering)
- Ignition Module
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Keyless Entry System (Excluding Door Handles)
- Kingpins & Bushings (Front Suspension)
- Lines & Fittings (Brakes)
- Linkage & Bushings (Front Suspension)
- Linkages & Couplings (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Master Cylinder
- Manifold (Exhaust and Bolts)
- Manifold (Intake and Bolts)
- Metal Links & Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Antenna
- Power Door Locks & Retainer Clips (Excluding Door Handles)
- Power Seat Motors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Actuator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint