

# PremiumCARE

# 1000+

# Covered Component Parts (Partial List)

- Hose Fuel Vapor Return
- Housing - Steering Gear
- Housing and Bearing Assembly Clutch
- Housing and Ins Assembly Transaxle
- Housing Assembly
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly
- Hub Assembly - Clutch Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler Assembly
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC-to-DC Converter
- Hybrid High-Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflatable Safety Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Alternator
- Insulator - Front Radius Arm
- Insulator - Front Spring
- Insulator - Rear Axle Differential
- Insulator - Rear Spring
- Insulator A/C Cond
- Insulator EGR Tube
- Insulator Front Spring
- Insulator Rear Spring
- Insulator Stabilizer Assembly
- Insulator Steering Gear
- Insulator/Mount - Engine Block
- Intake Manifold Run
- Intake Manifold Support
- Inter Clutch Cylinder Assembly
- Intercooler
- Interior/Exterior Door Handle/Lever
- Intermediate Clutch - Piston
- Intermediate Clutch - Piston Seal
- Internal Separator Plate
- Inverter System Controller (ISC) (Hybrid)
- Joint Assembly - Front Suspension
- Joint Assembly - Front Suspension Lower
- Joint Assembly - Rear Axle Shaft
- Joint Assembly - Rear Suspension Lower
- Joint Assembly - Shifter Rod Front
- Kingpins and Bushings
- Knock Sensor
- Knock Synchronizer
- Knuckle Assembly - Universal Joint
- Mobile Phone Control Assembly
- Module - Brake Anti-Lock
- Module - Engine Control Relay
- Module - Fuel Pump Driver
- Module - Glow Plug Control
- Module - Parking Aid Control
- Module - Passive Restraint
- Module - Water Detection
- Module and Control Assembly
- Brake Anti-Lock
- Module Assembly - Aux Controls
- Module Assembly - Ignition
- Module Assembly - Multi-Function
- Module Assembly - Transmission Case
- Module Instrument Cluster
- Motor - Adjustable Pedal
- Motor and Drive Assembly
- Motor Assembly - Blower Heater
- Motor Assembly - Elect Shift
- Motor Assembly - Steering Column Release
- Motor Assembly - Vacuum Controller
- Multispeed - Wiper Motor
- Navigation Antenna
- Noise Insulator
- Nox Sensor
- Nozzle - Defroster
- Nozzle - Windshield Washer
- Piston Assembly - Brake Cylinder
- Piston Assembly - Transmission Reverse Clutch
- Piston Pin - Front Band
- Piston Ring
- Pivot - Front/Rear Seat Back
- Pivot Rear Seat Back
- Planetary Assembly - Transmission Rear
- Planetary Front
- Plate - Camshaft Thrust
- Plate - Coupling Shaft
- Plate - Differential Clutch
- Plate - Forward Clutch
- Plate - Heater Core
- Plate - High Speed Clutch
- Plate - Oil Level
- Plate - Oil Pan Baffle
- Plate - Transmission
- Plate Assembly - Clutch Release
- Plate Assembly - Diff Gear Clutch
- Plate Assembly - Engine Rear Oil Pump
- Plate Front Spring Clip
- Plate Front/Rear Brake Back
- Plate Rear Spring Clip
- Plate Vacuum Pump Mounting
- Plenum EGR - Signal Con
- Plug - Oil Pan
- Plug Assembly Trailer Lamp
- Plunger - Interlock
- Plunger - Oil Pump Valve
- Plunger - Transmission Shift
- Plunger/Sleeve - Shifter
- Positive Crankcase Ventilation (PCV) Valve
- Potentiometer A/C
- Potentiometer Assembly
- Potentiometer Position Sensor
- Power Antenna
- Power Brake Booster Valve
- Power Brake Vacuum Motor
- Power Door Lock Actuator
- Power Door Locks and Retainer Clips
- Power Mirror Motor and Gears
- Power Regulator Rear Door
- Power Running Board Bracket
- Power Steering Fluid Reservoir
- Power Steering Hose
- Power Steering Module and Bracket
- Power Steering Pressure Switch
- Power Steering Pump Assembly
- Power Steering Pump Seals
- Power Steering Pump Valve
- Pressure Relief Valve Cap
- Pressure Transducer
- Primary Sun Gear
- Processor Assembly
- Processor Assembly - Regulator On
- PTO Assembly
- Pulley - Alternator
- Pulley - Belt Idler
- Pulley - Water Pump
- Pulley and Bracket - Fan
- Pulley and Bracket Assembly
- Pulley - Alternator Field
- Pulley Assembly - Belt Idler
- Pulley - Heater Core
- Pulley Assembly - Brake Vacuum Pump
- Pulley Assembly - Fan Belt
- Pulley Fan
- Pump - Front/Rear/Seat Pad Adjuster
- Pump - Windshield Washer
- Pump and Regulator Assembly
- Pump Assembly - Brake Vacuum
- Pump Assembly Ex Air Supply
- Purge Regulation Valve
- Race and Bushing Assembly
- Rack Assembly - Steering Gear
- Radiator Assembly
- Radiator Tank Inlet Assembly
- Rail Roof Sliding Panel
- Rail Anti-Lock Braking Valve
- Rear Axle Bearing
- Rear Axle Seal
- Rear Brake Lever
- Rear Brake Pin
- Rear Crankshaft Seal
- Rear Disc Brake Seal
- Rear Hub Assembly
- Rear Leaf Spring Shackles
- Rear Spring Air Suspension
- Rear Stab Bar Axle Meeting
- Rear Stabilizer Bar
- Rear Tube Assembly - Brake Master
- Rear Wheel Bearing
- Rear Wheel Bearing Lockout Washer
- Rear Wheel Bearing Seal Assembly
- Receiver Remote/Control
- Receiver Tire Pressure
- Rectifier Assembly - Alternator
- Rectifier Engine Warning
- Reductant Injector
- Reductant Lines
- Reductant Pump Assembly
- Reductant/Urea Tank
- Refrigerant Line
- Register Assembly - Heater
- Regulator - Front Door
- Regulator - Front Door L Window - Power
- Regulator - Front Door R Window - Power
- Regulator - Front Door Vent
- Regulator Assembly - EGR
- Relay - A/C Clutch
- Relay - Air Heater (Diesel)
- Relay - Alternator Field
- Relay - Anti-skid
- Relay - Engine Cooling Fan
- Relay - Purge Valve
- Relay and Bracket Assembly
- Relay Assembly
- Relay Assembly - Brake Warning
- Relay Assembly A/C Blower Motor
- Relay Assembly Headlamp
- Relay Assembly Solenoid Vacuum Valve
- Relay Assembly - Window Heater
- Relay Assembly/Turn Signal
- Relay Battery Saver - General Electronic Module
- Relay Bracket
- Relay Control
- Remote Control and Latch Assembly
- Reservoir - Brake M/C
- Reservoir - Brake Master Cylinder
- Reservoir Air Horn
- Reservoir and Outlet Tube Assembly
- Reservoir Assembly - EGR Valve
- Reservoir Assembly Vacuum
- Restrictor Fuel Vapor
- Ret Door Window Glass
- Return Assembly - Control Cable Bracket
- Ride Control Module
- Ring - Speed Sensor
- Ring - Transmission Synchronizer
- Rod - Clip/Slave Cylinder
- Rod - Transmission
- Rod Asy - Front Suspension
- Rod Assembly - Rear Suspension
- Rod Assembly - Transmission
- Roll Stability Control
- Roller - Reverse Idler Gear
- Rotor and Plate - Power Steering Pump
- Running Board Motor
- Screen - Oil Pump
- Screen Assembly
- Screw - Modulator Tp Pump
- Seal - A/C Condenser
- Seal - A/C Door
- Seal - A/C Inlet Door
- Seal - Brake Booster
- Seal - Camshaft Front
- Seal - Crankcase Separator
- Seal - Driveshaft Yoke Center
- Seal - Front Wheel Drive Inboard
- Seal - Front Wheel Hub
- Seal - Front/Rear Brake Hub
- Seal - Fuel Tank Filler
- Seal - Heater Core
- Seal - Housing Piston
- Seal - Hub Grease
- Seal - Intake Manifold
- Seal - Oil Pan Front
- Seal - Oil Pan Rear
- Seal - Oil Pump Body
- Seal - Outlet Fitting
- Seal - Parking Brake Shaft
- Seal - Power Steering Gear Input Shaft
- Seal - Rear Axle
- Seal - Rear Wheel Drive Inboard
- Seal - Rocker Arm Shaft
- Seal - Sector Shaft
- Seal - Steering Gear Valve
- Seal - Water Pump
- Seal - Window Regulator Switch
- Seals - Integral Power Steering Gear
- Seals and Gaskets
- Seat Back Reclining Mechanism
- Seat Belt and Buckle Rear Seat
- Seat Position Center
- Seat Track Support Assembler
- Sender - Fuel Tank
- Sender - Oil Pressure
- Sender - Water Temp
- Sensor - ABS
- Sensor - Air Suspension Level
- Sensor - Air Temperature
- Sensor - Crank Timing
- Sensor - Front Suspension Level
- Sensor - Fuel Injector Pump
- Sensor - Low Coolant
- Sensor - Oil Temperature
- Sensor - Output Shaft
- Sensor - Parking Aid System
- Sensor - Rear Suspension Level
- Sensor - Shock Absorber
- Sensor - Skid Control
- Sensor - Sliding Door Actuator
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Separator Assembly - Fuel Vapor
- Servo Assembly - Automatic Temperature Control
- Shackle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and Bearing Assembly
- Shaft and CV Joint Assembly
- Shaft and Rack Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft - Transmission
- Shaft - Transmission Input
- Shaft Bushing Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Shim A/C Compressor
- Skid Control Module Rear
- Sleeve - Bearing
- Sleeve - Front Stabilizer Bar
- Sleeve - Rear Stabilizer Bar
- Sleeve - Spacer Snap Ring
- Sleeve - Transmission Oil Pressure Boost
- Sleeve Assembly - Clutch Ad
- Sleeve Assembly - Rear Lube
- Sleeve/Ring Assembly Lockout
- Slide - Front/Rear Regulator
- Slide - Front/Rear Seat Track
- Slinger - Front/Rear Hub Oil
- Slip Yoke Assembly - Front Axle
- Snap Ring - Countershaft
- Snap Ring - Synchronizer
- Snap Ring - Transmission
- SMS and Transmission Assembly
- Tire Press
- Socket - Instrument Panel Light
- Socket and Wire - Rear Left
- Socket Assembly - Auxiliary Electric Power
- Solenoid - Engine Timing
- Solenoid - Engine Variable Timing
- Solenoid - Luggage Door
- Solenoid - Press Regulator
- Solenoid - Regulator
- Solenoid - Transmission Downshift
- Solenoid - Vacuum Modulator
- Solenoid and Manifold Actuator
- Solenoid Assembly - Fuel
- Solenoid Assembly - Trans
- Sonic Plenum EGR Valve
- Spacer - Front Spring
- Spacer - Power Steering
- Spacer - Rear Spring
- Spacer - Transmission
- Spare Wheel Carrier
- Speaker - Front
- Speaker - Assembly
- Speaker - Parking Aid Control
- Speedograph/Tachograph
- Shell - Transmission
- Speedometer Assembly
- Spindle - Nut and Bearing
- Spindle and Spindle Support Springs
- Spindle Assembly
- Spindle Nut Assembly
- Spring - Camshaft Plunger
- Spring - Differential Clutch
- Spring - Door Latch
- Spring - Front Suspension Torsion
- Spring - Gear Tensioner
- Spring - Leaf Rear
- Spring - Overrunning Clip
- Spring - Parking Pawl
- Spring - Rear Suspension Torsion
- Spring - Reverse Inhibitor
- Spring - Shift Bias
- Spring - Tran G/Shift Lever
- Spring Assembly - Front
- Springs Slipper
- Sprocket - Crankshaft
- Sprocket - Lock Ring
- Start/Stop Push-Button Switch
- Starter Motor Assembly
- Starter Motor Solenoid
- Stationary Elevated Ride Control
- Steering Actuator Valve
- Steering Column Assembly
- Steering Column Lock Actuator
- Steering Column Lock Assembly
- Steering Stop
- Steering Wheel Controls
- Steering Worm Bearing Cup
- Stem A/C Clutch Switch
- Stop Assembly Rear Seat Back
- Striker Rear Seat Latch
- Strut - Front Suspension Lower
- Subwoofer Assembly
- Suction/Discharge Assembly
- Sunload Sensor
- Support - Coupling Shaft Bearing
- Support - Exhaust Pump
- Support - Front/Rear Seat
- Support - Front/Rear Seat Belt Buckle
- Support - Rocker Arm
- Support - Turbocharger
- Support Arm Assembly
- Support Assembly - Drive
- Support Assembly - Trns
- Switch - A/C Comp Clutch
- Switch - A/C Pressure Control
- Switch - A/C Temperature Control
- Switch - Back-Up Light
- Switch - Brake Anti-Lock
- Switch - Brake Low Pressure
- Switch - Brake Pressure Warning
- Switch - Brake Traction Lock Control
- Switch - Coolant Temp
- Switch - Electrical Windshield Wiper
- Switch - Fuel Filter
- Switch - Ignition Anti-Theft
- Switch - Pressure Warning
- Switch - Temp Control
- Switch - Temp Control Valve
- Switch - Turn Indicator
- Switch - Vacuum Pump
- Switch and Bracket Assembly - Tailgate
- Switch Assembly - Brake Warning
- Switch Assembly - Door Ajar
- Switch Assembly - Door Lock
- Switch Assembly - Door Warning
- Switch Assembly - EGR
- Switch Assembly - Elect Shift
- Switch Assembly - Fuel Tank Neutral
- Switch Assembly - Lock Sensor
- Switch Assembly - Parking Brake
- Switch Assembly - Pressure
- Switch Assembly - Radio
- Switch Assembly - Rear Axle
- Switch Assembly - Speedometer
- Switch Assembly - Window Regulator
- SYNC<sup>®</sup> Module
- Synchronizer Assembly
- TCM (Transmission Control Module)
- Temperature Indicator
- Tensioner - Timing Chain
- Thermistor/Temperature Sensor Probe
- Thermostat Housing
- Throttle Valve Cable
- Thrust Bearing
- Tie Rods Inner/Outer
- Timing Chain Tensioner
- Timing Gear Set
- Torque Arm Assembly
- Torque Converter Pressure Valve
- Valve - Covers
- Valve - Door Vent
- Valve - EGR Vacuum Control
- Valve - Fuel Sender Check
- Valve - Guide
- Valve - Lube Connector
- Valve - Main Oil Pressure
- Valve - Throttle Center
- Valve - Throttle Pressure
- Valve - Transmission
- Valve Assembly - Air Bypass
- Valve Assembly - Brake
- Valve Assembly - Brake M/C
- Valve Assembly - Cooling Control
- Valve Assembly - Exhaust
- Valve Assembly - Fan Thermostat Control
- Valve Assembly - Fuel Selector
- Valve Assembly - Fuel Tank Vent
- Valve Assembly - Main Control
- Valve Assembly - Master Cylinder Control
- Valve Assembly - Power Steering Control
- Valve Assembly - Thermal Vent
- Valve Assembly - Trans Control
- Valve Assembly - Vacuum Check
- Valve/Switch Assembly - Brake
- Vane Sensor
- Variable Assist Power Steering Module
- Variable Cam Timing Assembly
- Variable Camshaft Timing (VCT) Phasers
- Vehicle Emergency Messaging Module Assembly
- Vent - Rear Axle Housing
- Venturi A/C Evaporator
- Venturi Assembly A/C
- Voltage Converter AC to DC
- U-bolt - Rear Spring
- U-bolt - Universal Joint
- Underbody Linkages and Couplings
- Universal Joint
- Vacuum Pump Gasket
- Vacuum Selector - Air Conditioner
- Valve - A/C Comp Low Pressure
- Valve - A/C Compressor Pressure
- Valve - Anti-Backfire
- Valve - Assembly H/L Cover
- Valve - Brake Pressure Differential
- Valve - Brake Pressure Meter
- Valve - Brake Sensor
- Valve - Covers
- Valve - Door Vent
- Valve - EGR Vacuum Control
- Valve - Fuel Sender Check
- Valve - Guide
- Valve - Lube Connector
- Valve - Main Oil Pressure
- Valve - Throttle Center
- Valve - Throttle Pressure
- Valve - Transmission
- Valve Assembly - Air Bypass
- Valve Assembly - Brake
- Valve Assembly - Brake M/C
- Valve Assembly - Cooling Control
- Valve Assembly - Exhaust
- Valve Assembly - Fan Thermostat Control
- Valve Assembly - Fuel Selector
- Valve Assembly - Fuel Tank Vent
- Valve Assembly - Main Control
- Valve Assembly - Master Cylinder Control
- Valve Assembly - Power Steering Control
- Valve Assembly - Thermal Vent
- Valve Assembly - Trans Control
- Valve Assembly - Vacuum Check
- Valve/Switch Assembly - Brake
- Vane Sensor
- Variable Assist Power Steering Module
- Variable Cam Timing Assembly
- Variable Camshaft Timing (VCT) Phasers
- Vehicle Emergency Messaging Module Assembly
- Vent - Rear Axle Housing
- Venturi A/C Evaporator
- Venturi Assembly A/C
- Voltage Converter AC to DC
- Washer - Crankshaft Pulley
- Washer - Front Suspension Lower
- Water Bypass Pipe
- Water Outlet Connection
- Water Pump
- Wheel Cylinders
- Wheel Steering Assembly
- Window Crank Handle/Knob
- Windshield Wiper Motor
- Wiper Motor Connector Grommet
- Wire - Power Steering Assist
- Wire - Speaker System
- Wire Assembly - Front/Rear Seat Control
- Wire Assembly - Neutral Switch
- Wire Assembly - RPM Sensor
- Wire Harness - A/C Fan
- Wire Harness - Air Conditioner
- Wiring - A/C Clutch
- Wiring - A/C Control Switch
- Wiring - Engine Loom
- Wiring - Exterior
- Wiring - Interior
- Wiring - Radio Amplifier
- Wiring Assembly - A/C Blower Motor Feed
- Wiring Assembly - Brake Skid
- Wiring Assembly - Interior/Engine/Exterior
- Wiring Assembly - Radio
- Worm - Parking Brake
- Yoke - Driveshaft Center
- Yoke - Shaft Support
- Yoke - Universal

## FORD PROTECT EXTENDED SERVICE PLANS

PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
PowertrainCARE	29 Critical Component Parts Covered	✔	✔	New Plans: up to the earlier of 8 years and 150,000 miles. Used Plans: up to the earlier of 60 months and 75,000 miles.	✔	Standard	✔
BaseCARE	84 Major Component Parts Covered	✔	✔	New Plans: up to the earlier of 8 years and 150,000 miles. Used Plans: up to the earlier of 60 months and 75,000 miles.	✔	Standard	✔
ExtraCARE	113 Key Component Parts Covered	✔	✔	New Plans: up to the earlier of 8 years and 150,000 miles. Used Plans: up to the earlier of 60 months and 75,000 miles.	✔	Standard	✔
PremiumCARE	1,000+ Key Component Parts Covered	✔	✔	New Plans: up to the earlier of 8 years and 150,000 miles. Used Plans: up to the earlier of 60 months and 75,000 miles.	✔	Standard	✔
CPO Upgrades	Exclusive Ford Protect Extended Service Plan Upgrades for Ford Certified Pre-Owned Vehicles	✔	■	A variety of time and mileage options up to the earlier of 11 years and 140,000 miles.	✔	Standard	✔

## FORD PROTECT MAINTENANCE PLANS

PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
Premium Maintenance Plan	Premium Maintenance Schedule	✔	✔	Plans available up to the earlier of 8 years and up to 150,000 miles.	■	Optional First-Day Rental	✔
Limited Maintenance Plan	Limited Maintenance Schedule	✔	✔	A variety of time and mileage options up to the earlier of 6 years and 100,000 miles.	■	■	✔
Basic Maintenance Plan	Basic Maintenance Schedule	✔	✔	A variety of time and mileage options up to the earlier of 6 years and 100,000 miles.	■	■	✔
Engine Maintenance Plan	Engine Maintenance Schedule	✔	✔	A variety of time and mileage options up to the earlier of 6 years and 100,000 miles.	■	■	✔

This brochure is intended to provide general information about Ford Protect. Prices and plans may vary, but purchased plans are not subject to change. Plan availability, benefits, coverage and provider may vary by state. For use only with October 2015 contract.

**In Florida, Ford Protect on Ford vehicles is a Service Contract from Ford Motor Company (License #12118). Ford Protect on competitive-make vehicles is a Service Contract from The American Road Insurance Company, Dearborn, MI 48126 (Certificate of Authority #09079).**

**In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).**

# Plan Options

Extended Service Plan



# Premium Maintenance Plan

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorber-Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Engine Hoses, Clamps and O-ring Seals
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

# Diesel EngineCARE

Covers 13 Critical Powertrain Component Parts

# 13

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- ABS Wheel Head Gasket
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Wiper Blades

# PowertrainCARE

Covers 29 Critical Powertrain Component Parts

# 29

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Locking Rings (Four-Wheel Drive)
- Manifold (Exhaust and Bolts)
- Manifold Intake and Bolts
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Water Pump

# Diesel EngineCARE Plus

Covers 21 Critical Powertrain Component Parts

# 21

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Oil Pan
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Thermostat
- Thermostat Housing
- Water Pump
- Flywheel
- Manifold (Exhaust and Bolts)
- Seals and Gaskets (Includes Cylinder Head Gasket)
- Valve Covers
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

# Essential Maintenance Plans

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection
- Engine Maintenance covers lube/oil/filter only

# BaseCARE

Covers 84 Major Component Parts

# 84

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Fluid Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors
- All Internally Lubricated Parts (Engine)
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Locking Rings (Four-Wheel Drive)
- Manifold (Exhaust and Bolts)
- Manifold Intake and Bolts
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Radiator Fan Relay
- Backing Plates (Brakes)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Timing Chain Cover
- Torque Converter
- Control Arms (Lower)
- Control Arms (Upper)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Idler Arm
- Ignition Switch
- Kingpins and Bushings (Front Suspension)
- Lines and Fittings (Metal – Brakes)
- Locking Rings (Steering)
- Locking Rings (Four-Wheel Drive)
- MacPherson Struts (Front)
- Manifold (Exhaust and Bolts)
- Manifold Intake and Bolts
- Master Cylinder
- Metal Fuel Lines
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Steering Pump
- Pulley Assy (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine, Front and Rear-Drive Axles, Steering & Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front & Rear Suspension)
- Springs (Brakes)
- Stabilizer Bar (Front & Rear Suspension)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Power)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Adjuster - Front/Rear Seat Buckle
- Timing Chain Cover
- Timing Chain Cover
- Torque Converter
- Transmission Case
- Turbocharger/Supercharger

- Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front-and Rear-Wheel-Drive Axles)
- Valve Covers
- Voltage Regulators
- Water Pump
- Wheel Cylinders
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- All Internally Lubricated Parts (Engine)
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Locking Rings (Four-Wheel Drive)
- Manifold (Exhaust and Bolts)
- Manifold Intake and Bolts
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine, Front and Rear-Drive Axles, Steering & Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front & Rear Suspension)
- Springs (Brakes)
- Stabilizer Bar (Front & Rear Suspension)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Power)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Adjuster - Front/Rear Seat Buckle
- Timing Chain Cover
- Timing Chain Cover
- Torque Converter
- Transmission Case
- Turbocharger/Supercharger

# ExtraCARE

Covers 113 Key Component Parts

# 113

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Control Head
- A/C Control Seals
- A/C Condenser
- Adaptive Cruise Control
- Air Suspension, Electronic (Selected Components)
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transmission)
- Alternator
- Anti-Lock Brake Module & Sensor
- Automatic Temperature Control
- Axle Shafts (Front- and Rear-Wheel-Drive Axles)
- Backing Plates (Brakes)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Calipers (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Upper & Lower)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Couplings (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injectors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas & Diesel Fuel Injectors and Metal Fuel Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Core Assy
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Idler Arm (Steering)
- Ignition Module
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Keyless Entry System (Excluding Door Handles)
- Kingpins & Bushings
- Amplifier Assembly
- Lines & Fittings (Brakes)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Calipers (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Upper & Lower)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injectors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas & Diesel Fuel Injectors and Metal Fuel Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Core Assy
- Hubs, Automatic Front Locking (Four-Wheel Drive)
- Idler Arm (Steering)
- Ignition Module
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Keyless Entry System (Excluding Door Handles)
- Kingpins & Bushings
- Amplifier Assembly
- Lines & Fittings (Brakes)
- Ball Joints (Upper & Lower)
- Brake Booster (Power)
- Calipers (Brakes)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Upper & Lower)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injectors
- Diesel Injector Fuel Lines
- Diesel Injector Pump
- Diesel Lift Pump
- Distributor Assembly
- Distributor Cap & Rotor
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- ETA Pump House Assembly
- Electronic Ignition Module
- Engine Mounts
- Evaporator (A/C)
- Field Coil (A/C)
- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump

# PremiumCARE

Covers more than 1,000 Key Component Parts (Parial List)

# 1000+

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Air Control Valve
- Air Idle Vacuum Valve
- Air Intake Ducting
- Air Pump Muffler
- Air Reservoir Tank Assembly
- Air Spring Solenoid
- Air Suspension Compressor
- Air Suspension Dryer Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly A/C
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Antenna Remote Control
- Anti-Skid Brake Relay
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly
- Arm Suspension
- Arm and Bushing Assembly - Brake Switch
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector Plate
- Arm Assembly - Windshield Wiper
- Arm Bushing Front Suspension
- Arm Bushing Rear Suspension
- Arm Steering Assembly - Steering Idler
- Arm Steering Assembly - Steering Worm
- Armature Smart Sensor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve
- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly
- Ball Joint Assembly - Upper/Lower
- Ballast - Hi Mount Stop Lamp
- Band - Front
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Suspension Compressor
- Bearing Assembly - Elect Shift
- Bearing Assembly - Rear Wheel
- Bearing Assembly - Spindle
- Bearing Cup Front Wheel
- Bearing Front Wheel
- Bearing Seal Front Suspension
- Bearings - All Internally Lubricated
- Belt Assembly Center Pass
- Blind Spot Sensor
- Blind Spot Sensor Bracket
- Block Assembly - Electrical Wiring
- Block Fuel Tube Support
- Blower Motor Assembly
- Blower Motor Resistor
- Body Assembly - Brake Booster
- Bolt - Gear Shift Housing
- Bolt Differential Gear Case
- Boost Pressure Switch
- Booster Assembly - Power Brake
- Boot - Brake Cylinder Front/Rear
- Boot - Driveshaft Joint
- Boot - Gearshift Control
- Boot - Rear Axle CV Joint
- Boot - Steering Column
- Boot Courtesy Lamp Switch
- Brace - Engine to Transmission
- Bracket A/C Comp Mounting
- Bracket A/C Condenser Mt
- Bracket A/C Hose
- Bracket Assembly - Front Shock
- Bracket Assembly - Front/Rear Shock
- Bracket Assembly - Front/Reverse Side Armrest Mounting
- Bracket Assembly - Rear Shock
- Bracket Assembly - Rear Axle Damper
- Bracket for Radius Arm
- Bracket Rear Door Glass
- Bracket Stabilizer Bar Link
- Brake Adjuster Screw
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control Seal
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Master Cylinder Switch
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator
- Cap Assembly - Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/Handset/Speaker
- Chain Timing
- Chassis Radio
- Child Safety Belt
- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever
- Clip - Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Assembly - Planetary
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate Assembly - Outlet
- Coil - A/C Compressor Clutch
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Compressor - Air Conditioner
- Compressor - Front Brake
- Condenser Assembly - A/C
- Cone and Roller - Drive Pinion
- Cone Roller Front
- Cone Roller Front Wheel Outer
- Connection - Water Outlet
- Control Arm Assembly - Front Suspension Upper/Lower
- Control Arm Assembly - Rear Suspension Upper/Lower
- Control Assembly - Brake Anti-Lock
- Control Assembly - Light Dimmer
- Control Assembly - Parking Brake Seat Track
- Control Assembly - Relay Module
- Control Assembly - Transmission Gear
- Control Assembly - Valve Push Rod
- Control Assembly - Wheel Bearing
- Control Head - Rear Suspension
- Control Module - Air Suspension
- Control Module - Heated Windshield
- Control Unit - Anti-Lock Brake
- Control Valve Seals
- Controls - Rear Seat
- Converter Assembly and A/C
- Converter Pressure Valve
- Converter Support
- Coolant Pump
- Coolant Temp Switch
- Coolant Tube Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil
- Cooler - EGR Oil
- Cooler - Transmission Oil Muffler Shield
- Cooler Assembly - Main
- Cooler Assembly - Power Steering Oil
- Cooler Assembly - Power Steering Oil
- Cooler Assembly EGR Recirculation
- Core - Air Conditioner
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump
- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting
- Crankcase Vent Tube
- Crankshaft Assembly
- Crankshaft Bearings
- Cup Wheel Bearing
- CV Joint Assembly - Inboard
- CV Joint Assembly - Outboard
- Cylinder - Door Lock
- Cylinder Assembly - Direct Inter Clutch
- Cylinder Assembly - Door Lock
- Cylinder Assembly - Power Steering
- Cylinder Assembly - Power Steering
- Cylinder Assembly - Rear Brake
- Cylinder Block
- Cylinder Head
- Temperature Sensor
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Damper - Front Axle Kingpin
- Damper - Crankshaft
- Damper - Rear Axle
- Damper - Steering Wheel
- Damper Assembly - Timing Chain
- Damper Drive Line Vibration
- Damper Front Spring
- Damper Rear Spring
- Detent - Transmission Control
- Diaphragm Assembly - TV Connector
- Diesel Fuel Injectors
- Diesel Injector Pump
- Diesel Lift Pump
- EGR Adapter
- EGR Air Valve Filter
- EGR Cooler
- EGR Inlet Tube
- EGR Pressure Valve
- EGR Regulator Assembly
- EGR Tube
- EGR Valve Assembly
- EGR Valve Position Sensor
- EGR Valve Solenoid
- Elbow - Crankcase Vent
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Display Module
- Door Assembly Heater Air
- Door Assembly Heater Seat Back
- Freeze Plug - Cylinder Block
- Front Axle Assembly - Drive
- Front Axle Bump Bracket
- Front Axle Hose Clip
- Front Differential Gears
- Front Differential Internal Bearings
- Front Driveshaft
- Front Hub Assembly
- Front Pump Assembly - Kingpin
- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Drive Pinion
- Driveshaft Assembly
- Drum - Second Sun Gear
- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drive Assembly - Right TV Connector
- Dust Seal - Inner Drive Shaft
- Dust Shield
- DVD Player and Display
- Eccentric Cam Fuel Pump
- EGR Adapter
- EGR Air Valve Filter
- EGR Cooler
- EGR Inlet Tube
- EGR Pressure Valve
- EGR Regulator Assembly
- EGR Tube
- EGR Valve Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Display Module
- Door Assembly Heater Air
- Door Assembly Heater Seat Back
- Freeze Plug - Cylinder Block
- Front Axle Assembly - Drive
- Front Axle Bump Bracket
- Front Axle Hose Clip
- Front Differential Gears
- Front Differential Internal Bearings
- Front Driveshaft
- Front Hub Assembly
- Front Pump Assembly - Kingpin
- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Engine Torque Strut/Mount
- Equalizer - Parking Brake
- Exhaust Control Assembly
- Extension Housing Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blower
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal
- Joint Spline
- Flapper Valve - Fuel Inlet Pipe
- Fork - Gear Shifter
- Fork and Roller Assembly - Differential
- Frame & Spring Front/Rear Seat
- Frame Front/Rear Seat Back
- Freeze Plug - Cylinder Block
- Front Axle Assembly - Drive
- Front Axle Bump Bracket
- Front Axle Hose Clip
- Front Differential Gears
- Front Differential Internal Bearings
- Front Driveshaft
- Front Hub Assembly
- Front Pump Assembly - Kingpin
- Front Rebound Bumper
- Front Spring Air Suspension
- Front Stabilizer Bar
- Gasket - Rear Wheel Bearing Rotor
- Gasket - Reverse Servo Plate
- Gasket - Trans Assembly
- Gasket - Trans Gear Shift
- Gasket - Transmission Intermediate Band
- Gasket - Turbo Oil Tub
- Gasket - Turbocharger
- Gasket - Wiring Connector
- Gasket and Shaft Seal
- Gauge Assembly Vacuum
- Gear - Camshaft Drive
- Gear - Center Shaft Reverse
- Gear - Countershaft Clutch
- Gear - Differential Shift
- Gear - Engine Balance Shaft
- Gear - Low and Reverse
- Gear - Oil Pump Drive
- Gear - Output Shaft
- Gear - Reverse
- Gear - Reverse Idler
- Gear - Transmission
- Gear - Transmission Head Cover
- Gasket - Engine Plenum
- Gasket - Fuel Injector Nozzle
- Gasket - Input Shaft Bearing
- Gasket - Lockout Hub
- Gasket - Master Cylinder Cooler
- Gasket - Oil Cooler
- Gasket - Oil Filter Adapter
- Gasket - Oil Pump
- Gasket - Power Divider Cover
- Gasket - PTO Cover
- Gasket - Rear Axle
- General Electronic Module
- GPS System and Module - Factory-Installed
- Guide - Sun Roof Cable
- Guide - Timing Chain
- Guide Shoulder Strap
- Handle Assembly - Rear Seat
- Handle Roof on Glass
- Head - A/C Compressor Cylinder
- Headlamp Ballast
- Headlamp/Taillamp Bulbs
- Heads-up Display
- Heat Element - Front Seat
- Heat Shield
- Heater and A/C Control Regulator
- HID (High-Intensity Discharge) Headlights - Factory-Installed
- High Voltage Charger
- Hinge and Check - Front/Rear Door Lower
- Hinge - Front/Rear Door Upper
- Horn Assembly - High Pitch
- Horn Assembly - Low Pitch
- Horn Switch
- Hose - Crankcase Vent
- Hose - Power Steering Pressure
- Hose - Power Steering Reservoir Top
- Hose and Filter - Power Steering Line
- Hose Assembly - A/C Vacuum
- Hose Assembly - Power Steering Pressure
- Hose Assembly - Power Steering Return
- Hose Exhaust Air Pump
- Hose Front/Rear Seat B/ Pad

## Ford Protect PremiumCARE Extended Service Plan is so comprehensive, it's easier to refer you to what isn't covered – here are the highlights:

### Generally Covered by Your Auto Insurance –

Examples include: fixed (non-moving) body parts, bumpers, glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rear view mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow.

### Repairs Related to Your Maintenance Requirements –

Items listed in your vehicles owner guide such as: batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmission clutch disc, exhaust system (includes catalytic converter), spark plugs, squeaks, rattles, tires, wheel balancing, wheel alignment, all lamps and lights (LED and HID lights, bulbs, sealed beam and lenses) except when purchased with New or Incomplete PremiumCARE Interior/Exterior Lighting Option, fogging of lamp assemblies, shock absorbers, service adjustments and cleaning.

### Other Components and Repairs –

Fabric, liners, fasteners, carpets, dash pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance or if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations or modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs or expenses for the tear down, rental expense, inspection or diagnosis of failures not covered by this Agreement. Refer to contract for details.