

Plan Options
EXTENDED SERVICE PLAN
GAS/HYBRID/DIESEL VEHICLES



- Housing and Ins Assembly Transaxle
- Housing Assembly
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly
- Hub Assembly - Clutch Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler Assembly
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC-to-DC Converter
- Hybrid High-Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflatable Safety Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Alternator
- Insulator - Front Radius Arm
- Insulator - Front Spring
- Insulator - Rear Axle Differential
- Insulator - Rear Spring
- Insulator A/C Cond
- Insulator EGR Tube
- Insulator Front Spring
- Insulator Rear Spring
- Insulator Stabilizer Assembly
- Insulator Steering Gear
- Insulator/Mount - Engine Block
- Intake Manifold Run
- Intake Manifold Support
- Inter Clutch Cylinder Assembly
- Intercooler
- Interior/Exterior Door Handle/Lever
- Intermediate Clutch - Piston Seal
- Intermediate Clutch - Piston Seal
- Internal Separator Plate
- Inverter System Controller (Hybrid)
- Joint Assembly - Front Suspension
- Joint Assembly - Front Suspension Lower
- Joint Assembly - Rear Axle Shaft
- Joint Assembly - Rear Suspension Lower
- Joint Assembly - Shifter Rod Front
- Knock Sensor
- Knuckle Assembly - Universal Joint
- Knuckle - Front Wheel
- Knuckle - Fuel Pump Driver
- Lamp - Interior Pillar*
- Lamp Assembly - Transmission Control
- Module - Water Detection
- Lane Depart Warning System
- Latch - Front/Rear Door
- Latch Front/Rear Seat Back
- Latch Rear Seat
- Latch Rear Seat Cushion
- LED (Light-Emitting Diode)
- Lighting - Factory-Installed*
- Level Reverse Gear shaft
- Lever - Brake Shoe Adjuster
- Lever - Parking Brake
- Lever - Power Diff
- Lever Assembly - Down Shift
- Lever Assembly - Elect Shift
- Lever Brake Shoe Adjuster
- Lever Lumbar Support
- Lever Transfer Case Control
- Lift Assembly Hood
- Link Assembly - Stabilizer Bar
- Linkage and Bushings
- Load Leveler Suspension System
- Lock Assembly - Steering
- Lock Assembly Rear Seat Back
- Locking Hub Assembly
- Lockout Hub Actuator Cam
- Lockout Hub Plate
- Logic Module Brake - Master Cylinder
- Lower Ball Joint - Front Axle
- Lower Piston Seal
- MacPherson Struts
- Magnet Case Ceramic
- Main Bearing Thrust Washer
- Manifold - Vacuum Outlet
- Manifold Absolute Pressure Sensor
- Manifold and Thermostat
- Manifold and Tube Assembly
- Manifold and Valve Assembly
- Manifold Assembly - Fuel Supply
- Mass Air Flow Sensor
- Mass Air Flow/Intake Air Temp Sensor
- Master Assembly - Parking Brake Control
- Master Cylinder
- Master Cylinder Assembly
- Master Cylinder Spring
- Metering Valve Assembly
- Microphone Assembly
- Mobile Phone Control Assembly
- Module - Brake Anti-Lock
- Module - Engine Control Relay
- Module - Fuel Pump Driver
- Module - Glow Plug Control
- Module - Parking Aid Control
- Module - Passive Restraint
- Module - Water Detection
- Module and Control Assembly
- Brake Anti-Lock
- Module Assembly - Aux Controls
- Module Assembly - Ignition
- Module Assembly - Multi-Function
- Module Assembly - Transmission Case
- Module Instrument Cluster
- Motor - Adjustable Pedal
- Motor and Drive Assembly
- Motor Assembly - Blower Heater
- Motor Assembly - Elect Shift
- Motor Assembly - Steering Column Release
- Motor Assembly - Vacuum Controller
- Multispeed - Wiper Motor
- Navigation Antenna
- Noise Insulator
- Nox Sensor
- Nozzle - Defroster
- Nozzle - Windshield Washer
- Nozzle and Duct Heater Dems
- Nozzle Assembly - Fuel Injector
- Nozzle Window Defogger
- Nut Assembly Front Wheel Bearing
- Nut Steering Gear
- Odometer Assembly
- Oil Actuator Assembly
- Oil Cooler Transmission
- Oil Level Sensor
- Oil Pan
- Oil Pressure Sender
- Inverter System Controller
- Oil Pump
- Oil Pump Gear
- Oil Pump Housing
- Oil Seal - Output Seal
- Oil Seals - All Internal and External
- Oil Selector Main Control Valve
- Orifice - Power Steering Tube Seal
- O-ring - Locking Hub
- O-ring - Oil Cooler
- O-ring - Pressure Warning Switch
- O-ring - Suspension Air Spring Dryer Conn
- O-ring Solenoid
- Output Flange Ret Nut
- Output Shaft Bearing
- Output Shaft Seal
- Oxygen Sensor
- Pad - Brake and Clutch Pedal
- Panel Assembly Roof
- Parking Brake Cam Plate
- Parking Pawl
- Pawl Front/Rear Seat Back Latch
- Pawl Overdrive Shift
- PCM (Powertrain Control Module)
- PCV and Elbow Assembly
- PCV Tube
- Pedal Adjuster Assembly
- Pedal Assembly - Accelerator
- Pilot Assembly
- Pin - Differential Pinion Shaft
- Pin - Door Hinge
- Pin - Piston
- Pin - Planetary Gear
- Pin - Steering Column
- Pin Lock - Rear Spring Shackle
- Pin Plate
- Pinion - Diff Spider
- Pipe Brake Anti-lock
- Piston - Driveshaft Accumulator
- Piston - Front Servo
- Piston - Transmission Reverse
- Piston and Connecting Rod Assembly
- Piston Assembly - Brake Cylinder
- Piston Assembly - Transmission Reverse Clutch
- Piston Pin - Front Band
- Piston Ring
- Pivot - Front/Rear Seat Back
- PTO Assembly
- Pulley - Alternator
- Pulley - Belt Idler
- Pulley - Oil Pump
- Pulley and Bracket - Fan
- Pulley and Bracket Assembly - Fan
- Pulley Assembly - Belt Idler
- Pulley Assembly - Brake Vacuum Pump
- Pulley Assembly - Fan Belt
- Pulley Fan
- Pump - Front/Rear/Seat Pad Adjuster
- Pump - Windshield Washer
- Pump and Regulator Assembly
- Pump Assembly - Brake Vacuum
- Pump Assembly Ex Air Supply
- Purge Regulation Valve
- Race and Bushing Assembly
- Rack Assembly - Steering Gear
- Radiator Assembly
- Radiator Tank Inlet Assembly
- Rail Roof Sliding Panel
- Rear Anti-lock Braking Valve
- Rear Axle Bearing
- Rear Axle Seal
- Rear Brake Lever
- Rear Brake Shoe Pin
- Rear Crankshaft Seal
- Rear Disc Brake Seal
- Rear Hub Assembly
- Rear Leaf Spring Shackles
- Rear Spring Air Suspension
- Rear Stab Bar Axle Meeting
- Rear Stabilizer Bar
- Rear Tube Assembly - Brake Master
- Rear Wheel Bearing
- Rear Wheel Bearing Lockout Washer
- Rear Wheel Bearing Seal Assembly
- Receiver Remote/Control
- Receiver Tire Pressure
- Rectifier Assembly - Alternator
- Rectifier Engine Warning
- Reductant Injector
- Reductant Lines
- Reductant Pump Assembly
- Reductant/Urea Tank
- Refrigerant Line
- Register Assembly - Heater
- Regulator - Front Door
- Regulator - Front Door L
- Seal - A/C Inlet Door
- Seal - Brake Booster
- Seal - Camshaft Front
- Seal - Crankcase Separator
- Seal - Driveshaft Yoke Center
- Seal - Front Wheel Drive Inboard
- Seal - Front Wheel Hub
- Seal - Front/Rear Brake Hub
- Seal - Fuel Tank Filler
- Seal - Heater Core
- Seal - Housing Piston
- Seal - Hub Grease
- Seal - Intake Manifold
- Seal - Oil Pan Front
- Seal - Oil Pan Rear
- Seal - Oil Pump Body
- Seal - Outlet Fitting
- Seal - Parking Brake Shaft
- Seal - Power Steering Gear Input Shaft
- Seal - Rear Axle
- Seal - Rear Wheel Drive Inboard
- Seal - Rocker Arm Shaft
- Seal - Sector Shaft
- Seal - Steering Gear Valve
- Seal - Water Pump
- Seal - Window Regulator Switch
- Seal Assembly - Steering Column
- Seals - Integral Power Steering Gear
- Seals and Gaskets
- Seat Back Reclining Mechanism
- Seat Belt and Buckle Rear Seat
- Seat Position Center
- Seat Track Support Assembly
- Sender - Fuel Tank
- Sender - Oil Pressure
- Sender - Water Temp
- Sensor - ABS
- Sensor - Air Suspension Level
- Sensor - Air Temperature
- Sensor - Crank Timing
- Sensor - Front Suspension Level
- Sensor - Fuel Injector Pump
- Sensor - Low Coolant
- Sensor - Oil Temperature
- Sensor - Output Shaft
- Sensor - Parking Aid System
- Sensor - Rear Suspension Level
- Sensor - Shock Absorber
- Sensor - Skid Control
- Sensor - Sliding Door Actuator
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Separator Assembly - Fuel Vapor
- Servo Assembly - Automatic Temperature Control
- Shackle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and Bearing Assembly
- Shaft and CV Joint Assembly
- Shaft and Rack Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Rear Suspension Level
- Shaft Bushing Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Shim A/C Compressor
- Skid Control Module Rear
- Sleeve - Bearing
- Sleeve - Front Stabilizer Bar
- Sleeve - Rear Stabilizer Bar
- Sleeve - Spacer Snap Ring
- Sleeve - Transmission Oil Pressure Boost
- Sleeve Assembly - Clutch Ad
- Sleeve Assembly - EGR Lube
- Sleeve/Ring Assembly Lockout
- Slide - Door Window Regulator
- Slide - Front/Rear Seat Track
- Slinger - Front/Rear Hub Oil
- Slip Yoke Assembly - Front Axle
- Snap Ring - Countershaft
- Snap Ring - Synchronizer
- Snap Ring - Transmission
- SNS and Transmission Assembly - Tie Press
- Socket - Instrument Panel Light
- Socket and Wire - Rear Left
- Socket Assembly - Auxiliary Electric Power
- Solenoid - Engine Timing
- Solenoid - Engine
- Solenoid - Luggage Door
- Solenoid - Press Regulator
- Solenoid - Regulator
- Solenoid - Transmission Downshift
- Solenoid - Vacuum Modulator
- Solenoid Assembly - Fuel
- Solenoid Assembly - Trans
- Sonic Plenum EGR Valve
- Spacer - Front Spring
- Spacer - Power Steering
- Spacer - Rear Spring
- Spacer - Transmission
- Spare Wheel Carrier
- Lift Assembly
- Speaker - Assembly
- Speaker - Parking Aid Control
- Speedograph/Tachograph
- Speedometer Assembly
- Spindle - Nut and Bearing
- Spindle and Spindle Support Springs
- Spindle Assembly
- Spindle Nut Assembly
- Spring - Camshaft Plunger
- Spring - Differential Clutch
- Spring - Door Latch
- Spring - Front Suspension Torsion
- Spring - Gear Tensioner
- Spring - Turbine Speed
- Spring - Overrunning Clip
- Spring - Parking Pawl
- Spring - Rear Suspension Torsion
- Spring - Reverse Inhibitor
- Spring - Shift Bias
- Spring - Tran G/Shift Lever
- Spring Assembly - Front
- Springs Slipper
- Sprocket - Crankshaft
- Sprocket - Lock Ring
- Start/Stop Push-Button Switch
- Starter Motor Assembly
- Starter Motor Solenoid
- Stationary Elevated Ride Control
- Steering Actuator Valve
- Steering Column Assembly
- Steering Column Lock Actuator
- Steering Column Lock Assembly
- Steering Stop
- Steering Wheel Controls
- Steering Worm Bearing Cup
- Stem A/C Clutch Switch
- Stop Assembly Rear Seat Back
- Striker Rear Seat Latch
- Strut - Front Suspension Lower
- Subwoofer Assembly
- Underbody/Discharge Assembly
- Sunload Sensor
- Support - Coupling
- Support - Exhaust Pump
- Support - Front/Rear Seat
- Support - Front/Rear Seat Belt Buckle
- Support - Rocker Arm
- Support - Turbocharger
- Support Arm Assembly
- Support Assembly - Drive
- Support Assembly - Trans
- Switch - A/C Comp Clutch
- Switch - A/C Pressure
- Switch - A/C Temperature Control
- Switch - Back-Up Light
- Switch - Brake Anti-Lock
- Switch - Brake Low Pressure
- Switch - Brake Pressure Warning
- Switch - Brake Traction Lock Control
- Switch - Coolant Temp
- Switch - Electrical Windshield Wiper
- Switch - Fuel Filter
- Switch - Ignition Anti-Theft
- Switch - Pressure Warning
- Switch - Temp Control
- Switch - Temp Control Valve
- Switch - Turn Indicator
- Switch - Vacuum Pump
- Switch and Bracket Assembly - Tailgate
- Switch Assembly - Brake Warning
- Switch Assembly - Door Ajar
- Switch Assembly - Door Lock
- Switch Assembly - Door Warning
- Switch Assembly - EGR
- Switch Assembly - Elect Shift
- Switch Assembly - Fuel Tank
- Switch Assembly - Gear Shift Neutral
- Switch Assembly - Lock Sensor
- Switch Assembly - Parking Brake
- Switch Assembly - Pressure
- Switch Assembly - Radio
- Switch Assembly - Rear Axle
- Switch Assembly - Speedometer
- Switch Assembly - Window Regulator
- SYNC® Module
- Synchronizer Assembly
- TCM (Transmission Control Module)
- Temperature Indicator
- Tensioner - Timing Chain
- Thermistor/Temperature Sensor Probe
- Thermostat Housing
- Throttle Valve Cable
- Thrust Bearing
- Tie Rods Inner/Outer
- Timing Chain Tensioner
- Timing Gear Set
- Torque Arm Assembly
- Torque Converter Differential
- Valve - Brake Pressure Meter
- Valve - Brake Sensor
- Valve - Covers
- Valve - Door Vent
- Valve - EGR Vacuum Control
- Valve - Fuel Sender Check
- Valve - Guide
- Valve - Lube Connector
- Valve - Main Oil Pressure
- Valve - Throttle Control
- Valve - Throttle Pressure
- Valve - Transmission
- Valve Assembly - Air Bypass
- Valve Assembly - Brake
- Valve Assembly - Brake M/C
- Valve Assembly - Cooling Control
- Valve Assembly - Exhaust Air Sup
- Valve Assembly - Fan Thermostat Control
- Valve Assembly - Fuel Selector
- Valve Assembly - Fuel Tank Vent
- Valve Assembly - Main Control
- Valve Assembly - Master Cylinder Control
- Valve Assembly - Power Steering Control
- Valve Assembly - Thermal Vent
- Valve Assembly - Trans Control
- Valve Assembly - Vacuum Check
- Valve/Switch Assembly - Brake
- Vane Sensor
- Variable Assist Power Steering Module
- Variable Cam Timing Assembly
- Variable Camshaft Timing (VCT) Phasers
- Vehicle Emergency Messaging Module Assembly
- Vent - Rear Axle Housing
- Venturi A/C Evaporator
- Venturi Assembly A/C
- Viscous Coupler/Flexible Coupler
- Voltage Converter AC to DC
- Washer - Crankshaft Pulley
- Washer - Front Suspension Lower
- Water Bypass Pipe
- Water Outlet Connection
- Water Pump
- Wheel Cylinders
- Wheel Steering Assembly
- Window Crank Handle/Knob
- Windshield Wiper Motor
- Wiper Motor
- Connector Grommet
- Wire - Power Steering Assist
- Wire - Speaker System
- Wire Assembly - Front/Rear Seat Control
- Wire Assembly - Neutral Switch
- Wire Assembly - RPM Sensor
- Wire Harness - A/C Fan
- Wire Harness - Air Conditioner
- Wiring - A/C Clutch
- Wiring - A/C Control Switch
- Wiring - Engine Loom
- Wiring - Exterior
- Wiring - Interior
- Wiring - Radio Amplifier
- Wiring Assembly - A/C Blower Motor Feed
- Wiring Assembly - Brake Skid
- Wiring Assembly - Interior/Engine/Exterior
- Wiring Assembly - Radio
- Worm - Parking Brake
- Yoke - Driveshaft Center
- Yoke - Shaft Support
- Yoke - Universal

FORD PROTECT EXTENDED SERVICE PLANS								
PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	OPTIONAL KEY SERVICES	INTEREST-FREE FINANCING
PremiumCARE	1,000+ Components Covered	✓	✓	New Plans: up to the earlier of 10 years or 175,000 miles. Used Plans: up to the earlier of 6 years or 75,000 miles.	✓	Standard	✓	✓
ExtraCARE	113 Components Covered	✓	✓	New Plans: up to the earlier of 10 years or 175,000 miles. Used Plans: up to the earlier of 6 years or 75,000 miles.	✓	Standard	✓	✓
BaseCARE	84 Major Components Covered	✓	✓	New Plans: up to the earlier of 10 years or 175,000 miles. Used Plans: up to the earlier of 6 years or 75,000 miles.	✓	Standard	✓	✓
PowertrainCARE	29 Critical Components Covered	✓	✓	New Plans: up to the earlier of 10 years or 175,000 miles. Used Plans: up to the earlier of 6 years or 75,000 miles.	✓	Standard	✓	✓
Ford Blue Advantage Gold Upgrades	Exclusive Ford Protect Extended Service Plan Upgrades for Ford Gold Advantage Certified Vehicles	✓	■	Ford Blue Advantage – Gold Upgrades: up to the earlier of 11 years or 175,000 miles.	✓	Standard	✓	✓
Ford Blue Advantage Blue Upgrades	Exclusive Ford Protect Extended Service Plan Upgrades for Ford Blue Advantage Certified Vehicles	✓	■	Ford Blue Advantage – Blue Upgrades: up to the earlier of 6 years or 75,000 miles.	✓	Standard	✓	✓
TireCARE Plus	Covers everything that TireCARE covers, plus cosmetic damage to tires and wheels	✓	✓	Up to 8 years of coverage	Towing Only	Standard	■	✓
TireCARE	Covers all costs associated with the repair or replacement of a tire or wheel due to a road hazard	✓	✓	Up to 8 years of coverage	Towing Only	Standard	■	✓

FORD PROTECT MAINTENANCE PLANS								
PLAN	DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	OPTIONAL KEY SERVICES	INTEREST-FREE FINANCING
Premium/Extra Maintenance Plan	Covers routine inspections, preventive care, all scheduled maintenance, and replacement of select wear items	✓	✓	Premium Maintenance: plans available up to the earlier of 10 years or up to 175,000 miles. Extra Maintenance: plans available up to the earlier of 8 years or up to 150,000 miles.	■	Optional First-Day Rental	■	✓
Limited Maintenance Plan	Covers oil and filter change, tire rotation, multi-point inspection, (DEF) top-off	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	■	✓
Basic Maintenance Plan	Covers oil and filter change, tire rotation, multi-point inspection	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	■	✓

■ *Not offered.*

This brochure is intended to provide general information about extended service plans offered by Ford Protect. Prices and plan details may have changed after the brochure was printed. Plan availability, benefits, coverage and provider may vary by state. Please refer to your plan's service contract for the actual terms and conditions.

In Florida, Ford Protect is a Service Contract from Ford Motor Service Company (License #42722).

In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).

