Select the Plan and Coverage You Want for Your Ford Medium Duty Truck*

TIME, MILEAGE AND HOURS OPTIONS (Available within New Vehicle Limited Warranty)						
			Gas		Die	sel
Plan Length, Miles or Hours Covered (Coverage ends at the earliest of years, miles or hours)		PremiumCARE	BaseCARE	PowertrainCARE	PremiumCARE	BaseCARE
Miles	Hours			3 Years		
36,000	1,440	1	~			
48,000	1,920	1	1			
60,000	2,400	1	1			
75,000	3,000	√ √ √	1		1	1
100,000	4,000	~	~		1	1
150,000	6,000	~	~	~	1	1
200,000	8,000	1	1	1	1	1
250,000	10,000				1	1
				4 Years		
75,000	3,000	1	\checkmark		1	1
100,000	4,000	1	\checkmark		1	1
150,000	6,000	1	1	1	1	\ \
200,000	8,000	1	1	1	1	
250,000	10,000				1	1
		5 Years				
75,000	3,000	1	1		1	1
100,000	4,000	1	1		1	✓ ✓
150,000	6,000	1	1	1	1	1
200,000	8,000	1	1	1	1	1
250,000	10,000				 ✓ 	1
		6, 7 and 8 Years				
150,000	6,000	1	1	1	1	1
200,000	8,000	1	1	1	1	1
250,000	10,000				1	1

*Eligibility applies to 2016 Model Year and newer Medium Duty vehicles.

Not offered.



FORD **PROTECT**®

This brochure is intended to provide general information about a Medium Duty extended service plan offered by Ford Protect. It was printed for the October 2023 plan year. Prices and plan details may have changed after the brochure was printed. Plan availability, benefits, coverage and provider may vary by state. Please refer to your plan's service contract for the actual terms and conditions, including a list of covered repairs.

In Florida, Ford Protect is a Service Contract from Ford Motor Service Company (License #22-38-3364381).

In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).

23FLP-MDBRCH-F 64172 1500b


Printed in the U.S.A.

October 2022

FORD **PROTECT**[®]

Medium Duty

EXTENDED SERVICE PLAN

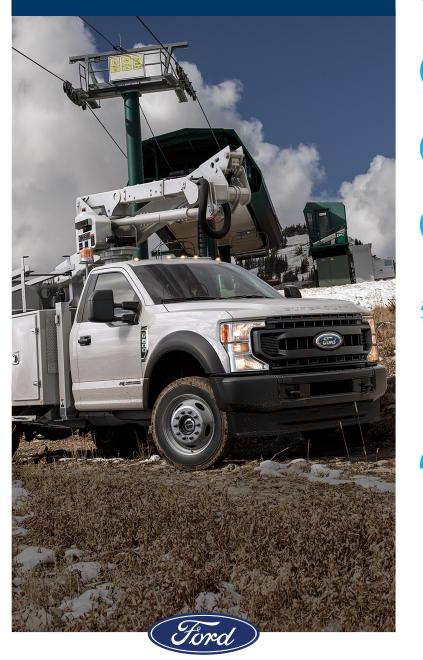

Drive On with Confidence.



The Ford Protect extended service plan is 100% backed by Ford Motor Company.



Service provided at Ford and Lincoln dealerships in the U.S., Canada and Mexico.



Limit out-of-pocket expenses.

Pay only your deductible, if any, per covered repair visit



Ford-authorized parts and service.

Covered repairs are made with Ford-authorized parts by factory-trained and certified technicians



24-hour Roadside Assistance.

- Towing Assistance (up to \$200 per occurrence)
- Emergency Travel Expense (up to \$1,000) within the first 5 days per occurrence)
- Destination Assistance (up to \$75)
- Call 1-800-241-3673



Coverage is 100% transferable.

If you ever sell your vehicle, the new owner can take advantage of remaining coverage. This could help attract buyers, plus it may bring an INCREASED RESALE VALUE for your vehicle (transfer fee applies).


The Ford Protect Medium Duty extended service plan gives you peace of mind.

We want you to be completely satisfied with your Ford Medium Duty truck ownership experience. That's where a Ford Protect extended service plan comes in. Make sure your Ford Medium Duty truck has the protection it needs by using Ford-authorized parts and service to keep it running at its best. All this and competitive pricing add up to peace of mind!

Coverage includes:

- Repair and replacement of covered components for the earliest of the time, mileage or hours you select
- Failure of covered components due to normal wear, mechanical breakdowns and repairs caused by defective material of covered components

GAS AND DIESEL MEDIUM DUTY TRUCKS

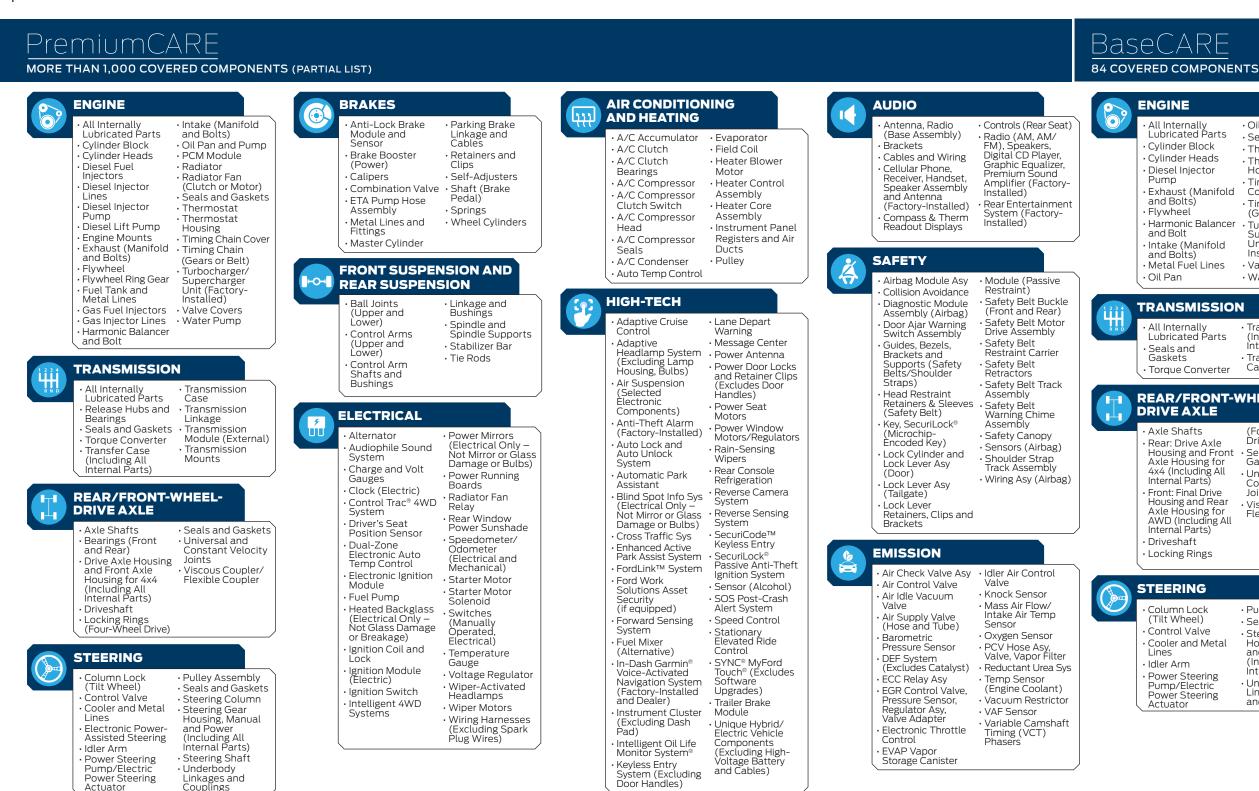

Actuator

GAS TRUCKS —

PowertrainCARE

29 COVERED COMPONENTS

 Brake Booster (Power) Brake Booster (Power) Calipers Calipers Catipers Combination Valve Seti-Adjusters Master Cylinder Metal Lines and Fittings Springs Parking Brake (Brake Pedal) Springs Springs Parking Brake (Cylinder Schlerker) Springs Wheel Cylinders Spindle and Spindle Supports (Upper and Lower) Control Arm Shafts and Bushings Starter Motor Schene Motor Motor	BRAKES			
 HRONT SOSPENSION Ival Joints (Upper and Lower) Control Arms (Upper and Lower) Control Arm Shafts and Bushings Stabilizer Bar Tie Rods Stabilizer Bar Torque Converter All Internally Lubricated Parts Seals and Gaskets Torque Converter Transmission Case Rear: Drive Axle Housing and Front Axle Housing for Axle Housing and Front Axle Housing and Front Axle Housing for Axle Housing and Front Axle Housing and Front Axle Housing and Front Axle Housing for Axle Housing and Rear Axle Housing and Rear Axle Housing for Axle Housing for Axl	 (Power) Calipers Combination Valve Master Cylinder Metal Lines and Fittings Parking Brake 	Linkages • Retainers and Clips • Self-Adjusters • Shaft (Brake Pedal) • Springs	Lubricated Parts . T · Cylinder Block H · Cylinder Heads · T · Exhaust (Manifold C and Bolts) · T · Flywheel ((· Intake (Manifold · TI and Bolts) S · Oil Pan (F · Oil Pump · V	hermostat lousing inning Chain over inning Chain Gears or Belt) urbocharger/ upercharger Unit Factory-Installed) alve Covers
 (Upper and Lower) Control Arms (Upper and Lower) Control Arm Shafts and Bushings Stabilizer Bar Tie Rods Stabilizer Bar Tie Rods Stabilizer Bar Teransfer Case (Including All Internal Parts) Transmission Case Transmission Case Alternator Electronic Ignition Module Fuel Pump Heated Backglass (Electrical Only – Not Glass Damage or Breakage) Ignition Switch Radiator Fan Relay Speedometer/ Odometer (Electrical and 	FRONT SUSPER	NSION	Seals and Gaskets • V	Vater Pump
 Control Arms (Upper and Lower) Control Arms (Upper and Lower) Stabilizer Bar Tie Rods Seals and Gaskets Torque Converter All Internally Lubricated Parts Seals and Gaskets Transmission Case Alternator Electronic Ignition Module Fuel Pump Heated Backglass (Electrical Only- Not Glass Switches (Including All Internal Parts) Switches (Manually Operated Electrical) Switches (Manually Switches (Electrical Only- Not Glass Speedometer/ Odometer (Electrical and Speedometer/ Odometer 	(Upper and	Bushings		
Image: Starter Motor Alternator Electronic Ignition Starter Motor Starter Motor	Control Arms (Upper and Lower) Control Arm	Spindle Supports • Stabilizer Bar	Lubricated Parts (I • Seals and Gaskets	ncluding All iternal Parts)
 Alternator Alternator Electronic Ignition Module Fuel Pump Heated Backglass (Electrical Only- Not Glass Ingnition Switch Radiator Fan Relay Speedometer/ Odometer (Electrical and Speedometer/ Odometer Speedometer/ Colored Speedometer/ Colored Starter Motor Starter Motor Solenoid Switches (Excluding Spark Plug Wires) Driveshaft Locking Rings 		/		IEEL-
	 Alternator Electronic Ignition Module Fuel Pump Heated Backglass (Electrical Only – Not Glass Damage or Breakage) Ignition Switch Radiator Fan Relay Speedometer/ Odometer 	 Starter Motor Solenoid Switches (Manually Operated Electrical) Voltage Regulator Wiper Motors Wiring Harnesses (Excluding Spark Plug Wires) 	Rear: Drive Axle Housing and Front S Axle Housing for G 4x4 (Including All U Internal Parts) Front: Final Drive Housing and Rear V Axle Housing for F AWD (Including All Internal Parts) Driveshaft	orive) eals and baskets Universal and constant Velocity oints 'iscous Coupler/

lly I Parts .ock eads ctor	 Oil Pump Seals and Gaskets Thermostat Thermostat Housing
/lanifold	 Timing Chain Cover
	 Timing Chain (Gears or Belt)
Balancer	 Turbocharger/ Supercharger
nifold	Unit (Factory- Installed)
Lines	 Valve Covers Water Pump
	/

TRANSMISSION

ly Parts	 Transfer Case (Including All Internal Parts)
nverter	 Transmission Case

REAR/FRONT-WHEEL-

Axle d Front ng for ing All ts) Drive d Rear ng for ding All ts)	(Four-Wheel Drive) • Seals and Gaskets • Universal and Constant Velocity Joints • Viscous Coupler/ Flexible Coupler

ck l) lve	 Pulley Assembly Seals and Gasket Steering Gear
Metal ering	Housing, Manual and Power (Including All Internal Parts)
ering	 Underbody Linkages and Couplings

	Cupper and Lower) • Control Arm Shafts and Bushings	Stabilizer B Tie Rods
	ELECTRICAL	
	 Alternator Electronic Ignition Module Fuel Pump Heated Backglass (Electrical Only – Not Glass Damage or Breakage) Ignition Switch Radiator Fan Relay Speedometer/ Odometer (Electrical and Mechanical) 	 Starter Mote Starter Mote Starter Mote Solenoid Switches (Manually Operated Electrical) Voltage Rege Wiper Moto Wiring Harn (Excluding S Plug Wires)
	AIR CONDITION	IING
Σ	A (C Cluster	A/C Compr

- A/C Clutch A/C Compressor Seals A/C Clutch Bearings
- A/C Compressor
- A/C Compressor
- Clutch Switch A/C Compressor
- Head
- Field Coil
- Pulley
- A/C Condenser
- Evaporator